



Popcorn Machine



OPERATIONAL TIPS

SWITCHES:

- Light and Warmer Switch--- turns on heat lamp and optional strip heater under corn pan.
- Kettle Motor Switch--- turns on motor that drives kettle agitator shaft.
- Kettle Heat Switch--- turns on heat element inside kettle.

NOTE: Do not cover air vent holes! Motor air intake and exhaust holes at top of the machine must be clear of any obstruction.

POPPING INSTRUCTIONS

1. Turn on kettle heat, kettle motor, and exhaust switches. Let the kettle heat for 4 minutes.
2. When corn has popped, rotate the handle to empty popcorn from kettle; return kettle to upright position.
3. Repeat the cycle; subsequent batches are always more flavorful than the initial batch.
4. Turn off the kettle heat switch on the final batch when the popcorn breaks over the lid of the kettle to eliminate smoke and odor.
5. Turn off kettle motor and exhaust switches.
6. Wipe exterior of kettle with heavy cloth after cooling of kettle to prevent burn or stain of oil drippings.
7. Turn off all switches.

CLEANING INSTRUCTIONS

1. Allow kettle to cool until warm enough to handle.
2. Unplug kettle and remove from machine.
3. Remove popped corn and pack in bags.
4. Empty the un-popped kernel tray.

For questions or additional help you can call us during store hours at **231-737-7368** or after hours at **231-740-5622**

Check out other items to rent at **RediRental.com**

Check out our "Redi Rental Popcorn Machine Tutorial" Video at: <https://www.youtube.com/watch?v=ik8gJmPMO4>